

XBOX DVD MOVIE PLAYBACK KIT

XBOX DVD 재생 키트

XBOX DVD 影片播放套件



XBOX™
COMPATIBLE



XBOX

INSTRUCTION MANUAL

XBOX DVD MOVIE PLAYBACK KIT

The Xbox DVD Movie Playback Kit lets you play DVDs on your Xbox console. The DVD Movie Playback Kit consists of three items:

- Infrared receiver
- Remote control
- Instruction Manual

The DVD Movie Playback Kit is for use exclusively with the Xbox™ video game system from Microsoft.

IMPORTANT! Before using this product, read the Xbox Video Game System Instruction Manual for important safety information and health warnings. Please retain both the Xbox Video Game System Instruction Manual and this manual for future reference and warranty information. The limited warranty covering this Xbox DVD Movie Playback Kit is contained in the Xbox Video Game System Instruction Manual.

SETTING UP THE DVD MOVIE PLAYBACK KIT

To place batteries in the remote control

1. Remove the battery compartment cover.
2. Place two AAA batteries (sold separately) into the remote control.
3. Replace the battery compartment cover.

Notes about batteries:

Keep batteries out of reach of children.


Do not mix old and new batteries, or batteries of different types. Follow manufacturer's instructions on battery use.

Remove old, weak, or worn-out batteries promptly

Always recycle or dispose of used batteries in accordance with your local ordinances.

If a battery leaks, remove all batteries and thoroughly clean the battery compartment with a damp paper towel, or follow the battery manufacturer's recommendations for cleanup. If fluid from the battery comes into contact with skin or clothes, flush skin with water immediately.

To connect the infrared receiver

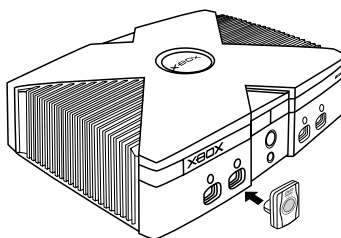

1. If the Xbox console is on, press the power button on the Xbox console to turn it off.
2. Connect the infrared receiver to any controller port on the front of the Xbox console.

PLAYING DVD MOVIES

To play DVDs

1. With the infrared receiver connected to the Xbox console, press the power button on the Xbox console to turn it on.
2. Press the eject button to open the disc tray.
3. Place the DVD on the disc tray with the label facing up.
4. Press the eject button to close the disc tray. The DVD will begin playing.

Selecting DVDs

The DVD Movie Playback Kit can play only region 3 DVDs that have this logo:



Avoiding Damage to DVDs or to the Disc Drive

Do not leave a disc in the Xbox console for extended periods when not in use.


Do not move the Xbox console while the power is on and a disc is inserted.

Do not apply labels, stickers, or other foreign objects to discs.

USING THE REMOTE CONTROL AND ONSCREEN DISPLAY

Use the DVD Movie Playback Kit remote control to operate DVD movie playback. Most basic features are available on the remote.

Button	Operation
Display	Display onscreen controls.
Play	Play video from current location.
Reverse	Fast reverse play back. If DVD is paused, slow reverse playback. Cycles through playback speeds.
Forward	Fast forward. If DVD is paused, slow forward. Cycles through playback speeds.

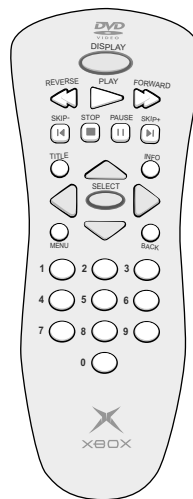

Skip - Go to beginning of current chapter. If this button is pressed within first two seconds of a chapter, go to beginning of previous chapter. If DVD is paused, go to previous frame.

Stop Stop playback.

Pause Pause playback.

Skip + Go to next chapter. If DVD is paused, go to next frame.

Title Go to title menu.

Info Display title, chapter, and elapsed time on the screen.

Select Accept current selection. If a specific chapter number is entered, go to that chapter.

Arrows Move selection up, down, left, or right.

Menu Go to main menu.

Back Go to previous menu. If at main menu, resume playback.

Numbers Enter specific chapter number, then press Select.

Additional features are available in the onscreen display.

Icon**Operation**

Cycle through available subtitle languages.



Cycle through available viewing angles.



Cycle through available audio tracks, including multilingual tracks.



Select video, audio, and language options from setup menu.



Looping Playback. First press selects A point. Second press selects B point and begins looping playback between A and B. Third press turns off looping playback.



Magnify picture. Toggles between zoom settings. When zoomed, use arrows to move around picture.

Universal remotes

To program a universal remote for use with the Xbox DVD Movie Playback kit, enter the device code for a supported RCA DVD player, according to the instructions for your universal remote.

PARENTAL CONTROL

You can limit the type of DVD content played on the Xbox video game system based on the rating level. To determine the rating level of your DVD movie, see your DVD movie documentation. By default, the Xbox video game system is set to play all content.

To change the level of content that can be played

1. Turn on the Xbox console with no disc in the disc tray.
2. Select **Settings**, and then select **Parental Control**.

3. Select **Movies**, and then select the level you want.

The Xbox game system will play DVDs that are rated at or below the selected level. If you choose any level other than All Content, you must enter a pass code.

If you lose or forget your pass code or have questions about this product, call the Xbox Customer Support number listed in the Troubleshooting section.

TROUBLESHOOTING

If DVD Features Don't Work

Some DVDs may not support all of the features of the Xbox DVD Movie Playback Kit, such as subtitles, multilingual audio tracks, multiple viewing angles, and slow-motion play. For more information about supported features, see the documentation from the DVD producer.

In rare instances, certain DVDs may not operate properly. This is primarily due to variations in the manufacturing process or software encoding of the DVD video software.

If There Is No Video or Sound, or If Video or Sound Quality Is Poor

Properly connect your AV cable or AV pack. For setup and audio and video troubleshooting information, see the Xbox Video Game System Instruction Manual or the AV pack instructions.

If You Need Help

Should problems persist, do not attempt to take apart, service, or modify the Xbox DVD Movie Playback Kit or Xbox console in any way. Doing so could present the risk of serious injury or death from electric shock or fire, and it will void your warranty. Please see

<http://www.xbox.com> or call the Xbox Customer Support number:

Hong Kong: 800 96 4215

Singapore: 800 448 1330



Information in this document, including URL and other Internet Web site references, is subject to change without notice. Unless otherwise noted, the example companies, organizations, products, domain names, e-mail addresses, logos, people, places, and events depicted herein are fictitious, and no association with any real company, organization, product, domain name, e-mail address, logo, person, place, or event is intended or should be inferred. Complying with all applicable copyright laws is the responsibility of the user. Without limiting the rights under copyright, no part of this document may be reproduced, stored in or introduced into a retrieval system, or transmitted in any form or by any means (electronic, mechanical, photocopying, recording, or otherwise), or for any purpose, without the express written permission of Microsoft Corporation.

Microsoft may have patents, patent applications, trademarks, copyrights, or other intellectual property rights covering subject matter in this document. Except as expressly provided in any written license agreement from Microsoft, the furnishing of this document does not give you any license to these patents, trademarks, copyrights, or other intellectual property.

© 2002 Microsoft Corporation. All rights reserved.

Microsoft, Xbox, and the Xbox logos are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories. Confidential unpublished works. Copyright 1992–1997 Dolby Laboratories. All rights reserved.

The names of actual companies and products mentioned herein may be the trademarks of their respective owners.

Microsoft Corporation, One Microsoft Way, Redmond, WA 98052-6399 USA.



제품 설명서

XBOX DVD 재생 키트

Xbox DVD 재생 키트로 Xbox 본체에서 DVD를 재생할 수 있습니다. DVD 재생 키트는 다음 세 항목으로 구성됩니다.

- 적외선 수신기
- 리모컨
- 제품 설명서

DVD 재생 키트는 Microsoft Xbox™ 비디오 게임 시스템 전용입니다.

중요! 이 제품을 사용하기 전에 Xbox 비디오 게임 시스템 제품 설명서에서 주요 안전 정보와 건강을 위한 주의 사항을 읽어 보십시오. 나중에 참조 및 보증 정보로 활용할 수 있도록 Xbox 비디오 게임 시스템 제품 설명서와 이 설명서를 잘 보관하십시오. Xbox DVD 재생 키트에 적용되는 제한된 보증은 Xbox 비디오 게임 시스템 제품 설명서에 들어 있습니다.

DVD 재생 키트 설치하기

리모컨에 배터리를 끼우려면 다음 절차를 따르십시오.

1. 배터리 함 덮개를 제거합니다.
2. AAA 배터리(별도 판매) 2개를 리모컨에 끼웁니다.
3. 배터리 함 덮개를 닫습니다.

배터리 사용에 관한 주의 사항:

배터리는 어린이의 손이 닿지 않는 곳에 보관하십시오.


낡은 배터리와 새 배터리 또는 서로 다른 종류의 배터리를 함께 쓰지 마십시오. 배터리 사용에 대한 제조업체의 지침을 따르십시오.

오래되었거나, 약하거나, 수명이 다 된 배터리는 즉시 제거하십시오.

사용한 배터리는 반드시 지역 법규에 따라 재활용 또는 폐기하십시오.

배터리가 누출된 경우 모든 배터리를 제거하고 배터리 함을 물수건으로 깨끗이 닦은 후 제조업체의 청소 지침을 따르십시오. 배터리에서 새어 나온 액체가 피부나 옷에 접촉된 경우 즉시 피부를 물로 씻으십시오.

적외선 수신기를 연결하려면 다음 절차를 따르십시오.

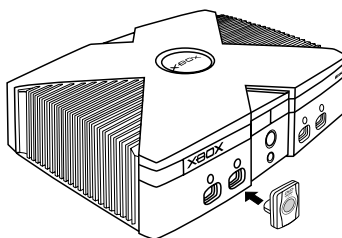

1. Xbox 본체가 켜져 있을 경우 Xbox 본체의 전원 단추를 눌러서 끕니다.
2. 적외선 수신기를 Xbox 본체 앞쪽의 컨트롤러 포트에 연결합니다.

DVD 영화 재생하기

DVD를 재생하려면 다음 절차를 따르십시오.

1. 적외선 수신기가 Xbox 본체에 연결된 상태에서 Xbox 본체의 전원 단추를 눌러서 켭니다.
2. 꺼내기 단추를 눌러 디스크 트레이를 엽니다.
3. DVD를 레이블이 위로 향하도록 디스크 트레이에 올려 놓습니다.
4. 꺼내기 단추를 눌러 디스크 트레이를 닫습니다. DVD가 재생되기 시작합니다.

DVD 선택하기

DVD 재생 키트에서는 이 로고가 있는 지역코드 3인 DVD만 재생할 수 있습니다.



DVD 또는 디스크 드라이브 손상 방지하기

Xbox 본체를 장시간 사용하지 않을 경우 디스크를 넣어 두지 마십시오.


전원이 켜지거나 디스크를 넣는 동안에는 Xbox 본체를 움직이지 마십시오.

디스크에 레이블, 스티커 또는 다른 이물질이 붙어거나 바르지 마십시오.

리모컨과 화면 표시 사용하기

DVD 재생 키트 리모컨을 사용하여 DVD 영화 재생을 조작합니다. 대부분의 기본적인 기능은 리모컨을 이용할 수 있습니다.

단추	기능
Display (화면 표시)	-화면 조작 기능을 표시합니다.
Play (재생)	-현재 위치에서 비디오를 재생합니다.
Reverse (반대로)	-거꾸로 빠르게 재생합니다. DVD가 일시 정지되면 거꾸로 느리게 재생합니다. 재생 속도를 선택합니다.
Forward (앞으로)	-앞으로 빠르게 재생합니다. DVD가 일시 정지되면 느리게 재생합니다. 재생 속도를 선택합니다.

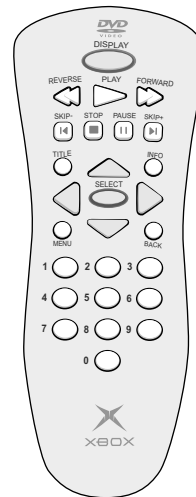

Skip - (건너뛰기 -)	-현재 장의 시작 위치로 이동합니다. 장의 처음 2초 이내에 이 단추를 누르면 이전 장의 시작 위치로 이동합니다. DVD가 일시 중지되면 이전 프레임으로 이동합니다.
Stop(정지)	-재생을 정지합니다.
Pause (일시 정지)	-재생을 일시 정지합니다.
Skip + (건너뛰기 +)	-다음 장으로 이동합니다. DVD가 일시 중지되면 다음 프레임으로 이동합니다.
Title (제목)	-제목 메뉴로 이동합니다.
Info (정보)	-제목, 장, 경과 시간을 화면에 표시합니다.
Select (선택)	-현재 선택을 적용합니다. 특정 장 번호를 입력하면 해당 장으로 이동합니다.
화살표	-선택 항목을 위, 아래, 왼쪽, 오른쪽으로 이동합니다.
Menu (메뉴)	-주 메뉴로 이동합니다.
Back (뒤로)	-이전 메뉴로 이동합니다. 현재 위치가 주 메뉴일 경우 재생을 계속합니다.
숫자	-특정 장 번호를 입력한 다음 선택을 누릅니다.

화면에 표시되는 추가 기능은 다음과 같습니다.

아이콘

기능



사용 가능한 자막 언어를 번갈아 선택합니다.



사용 가능한 카메라 각도를 번갈아 선택합니다.



다국어 트랙을 포함한 사용 가능한 오디오 트랙을 번갈아 선택합니다.



비디오, 오디오 및 언어 옵션을 선택할 수 있는 설정 화면으로 이동합니다.



반복 재생. 처음 한 번 누르면 A 지점이 선택됩니다. 한 번 더 누르면 B 지점이 선택되고 A와 B 사이의 반복 재생을 시작합니다. 또 한 번 더 누르면 순환 재생 기능이 꺼집니다.



영상 확대. 확대 설정을 번갈아 선택합니다. 확대될 때 화살표를 사용하여 영상에서 위치를 이동합니다.

범용 리모컨

Xbox DVD 재생 키트에 사용하도록 범용 리모컨을 프로그래밍하려면 범용 리모컨 지침에 따라 지원되는 RCA DVD 플레이어용 장치 코드를 입력합니다.

보호자 통제

등급에 따라 Xbox 비디오 게임 시스템에서 재생되는 DVD 콘텐츠의 종류를 제한할 수 있습니다. DVD 영화의 등급을 확인하려면 DVD 영화 설명서를 참조하십시오. 기본적으로 Xbox 비디오 게임 시스템은 모든 콘텐츠를 재생하도록 설정되어 있습니다.

재생할 수 있는 콘텐츠 등급을 변경하려면 다음 절차를 따르십시오.

1. 디스크 트레이에 디스크가 없는 상태에서 Xbox 본체를 켭니다.
2. **설정, 보호자 통제를 차례로 선택합니다.**
3. **영화를 선택한 다음 원하는 등급을 선택합니다.**

Xbox 게임 시스템은 선택한 등급 이하의 DVD를 재생합니다. 모든 콘텐츠 이외의 등급을 선택할 경우 암호 코드를 입력해야 합니다.

암호 코드를 잃어 버리거나 잊었을 경우, 또는 본 제품에 관하여 궁금한 점이 있을 경우 문제 해결 항목에 열거되어 있는 Xbox 고객 지원 센터로 문의하십시오.

문제 해결

DVD 기능이 작동하지 않을 경우

일부 DVD는 자막, 다국어 오디오 트랙, 다양한 카메라 각도, 느린 동작 재생 등 Xbox DVD 재생 키트의 일부 기능을 지원하지 않을 수 있습니다. 지원되는 기능에 대한 자세한 내용은 DVD 제품의 설명서를 참조하십시오.

드문 경우이지만 특정 DVD가 제대로 동작하지 않을 수 있습니다. 이것은 주로 DVD 비디오 소프트웨어의 제조 공정이나 소프트웨어 인코딩의 변동 때문입니다.

비디오 또는 사운드가 없거나 화질 또는 음질이 나쁜 경우

AV 케이블 또는 AV 팩을 올바르게 연결하십시오. 설치 및 오디오와 비디오 문제 해결에 대한 정보는 Xbox 비디오 게임 시스템 제품 설명서 또는 AV 팩 설명서를 참조하십시오.

도움이 필요한 경우

문제가 계속될 경우 Xbox DVD 재생 키트 또는 Xbox 본체를 분해하거나 어떠한 방법으로도 분해, 수리 또는 변경하지 마십시오. 이러한 경우 감전이나 화재로 심각한 부상 또는 사망의 위험이 있으며, 보증을 무효로 만들 수 있습니다.

<http://www.xbox.com> 사이트를 참조하거나 Xbox 고객 지원 센터에 문의하십시오.

대한민국: 00368 440 0090(수신자 부담)

URL 및 다른 인터넷 웹 사이트 참조를 포함한 이 설명서의 내용은 예고 없이 변경될 수 있습니다. 다른 설명이 없는 한, 용례에 사용된 회사, 기관, 제품, 도메인 이름, 전자 메일 주소, 로고, 사람, 장소 및 이벤트 등은 실제 데이터가 아닙니다. 어떠한 실제 회사, 기관, 제품, 도메인 이름, 전자 메일 주소, 로고, 사람, 장소 또는 이벤트와도 연관시킬 의도가 없으며 그렇게 유추해서도 안 됩니다. 해당 저작권법을 준수하는 것은 사용자의 책임입니다. 저작권에서의 권리와는 별도로, 이 설명서의 어떠한 부분도 Microsoft의 명시적인 서면 승인 없이는 어떠한 형식이나 수단(전기적, 기계적, 복사기에 의한 복사, 디스크 복사 또는 다른 방법) 또는 목적으로도 복제되거나, 검색 시스템에 저장 또는 도입되거나, 전송될 수 없습니다.

Microsoft가 이 설명서 본안에 관련된 특허권, 상표권, 저작권, 또는 기타 지적 재산권 등을 보유할 수도 있습니다. 서면 사용권 계약에 따라 Microsoft로부터 귀하에게 명시적으로 제공된 권리 이외에, 이 설명서의 제공은 귀하에게 이러한 특허권, 상표권, 저작권, 또는 기타 지적 재산권 등에 대한 어떠한 사용권도 허여하지 않습니다.

© 2002 Microsoft Corporation. All rights reserved.

Microsoft, Xbox 및 Xbox 로고는 미국, 대한민국 및/또는 기타 국가에서의 Microsoft Corporation 등록 상표 또는 상표입니다.

Dolby Laboratories의 사용권을 받아 제조함. "돌비" 및 "Double-D" 기호는 Dolby Laboratories의 상표입니다. 기밀 미발표 저작물. Copyright 1992-1997 Dolby Laboratories. All rights reserved.

여기에 인용된 실제 회사와 제품 이름은 해당 소유자의 상표일 수 있습니다.

Microsoft Corporation, One Microsoft Way, Redmond, WA 98052-6399 USA

Xbox DVD 影片播放套件可以讓您在 Xbox 主機上播放 DVD。DVD 影片播放套件包含三個項目：

- 紅外線接收器
- 遙控器
- 說明手冊

DVD 影片播放套件是 Microsoft 的 Xbox™ 視訊遊戲系統專用配備。

重要事項！使用本產品之前，請先閱讀

《Xbox 視訊遊戲系統說明手冊》，以獲取安全資訊和健康方面的警告。請將《Xbox 視訊遊戲系統說明手冊》與此手冊保留下來，以便將來參照與保固資訊之用。涵蓋此 Xbox DVD 影片播放套件的有限保固亦包含在《Xbox 視訊遊戲系統說明手冊》中。

安裝 DVD 影片播放套件

將電池裝入遙控器

1. 將電池盒的蓋子打開。
2. 將兩顆 AAA 電池 (需另外購買) 放入遙控器中。
3. 蓋上電池盒的蓋子。

電池的注意事項：


將電池置於小孩拿不到的地方。

請勿將舊電池、新電池、及不同類型的電池在一起混用。依照製造商的指示使用電池。

應立即將老舊、電力不足或損壞的電池替換掉。

應依照當地法令，進行電池的回收，或者處理用過的電池。

如果電池漏液，請將所有電池取出，然後用沾濕的紙巾將電池盒擦拭乾淨，或依照電池製造商的建議進行清理。如果電池的液體不小心接觸到皮膚或沾到衣服上，請立刻用水洗淨。

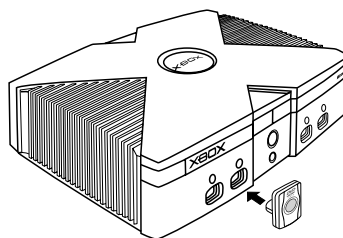

連接紅外線接收器

1. 如果 Xbox 主機是開著的，請按下電源按鈕，將電源關閉。
2. 將紅外線接收器接到 Xbox 主機正面的任何一個連接埠。

播放 DVD 影片

播放 DVD

1. 將紅外線接收器連接到 Xbox 主機，按下電源按鈕，打開電源。
2. 按下退出鍵，開啟光碟托盤。
3. 將 DVD (標籤面朝上) 放到托盤中。
4. 按下退出鍵，關閉光碟托盤。此時便會開始自動播放 DVD。

選取 DVD

DVD 影片播放套件只能播放有此標誌的地區 3 光碟。




避免造成 DVD 或光碟托盤的損壞

光碟用完以後，應該將它從 Xbox 主機中取出。在電源開啟且放入光碟後，請勿移動 Xbox 主機。請勿將標籤等外物黏在光碟片上。

使用遙控器和畫面顯示進行操作

使用 DVD 影片播放套件遙控器來操作 DVD 影片的播放。大部份的基本功能均可進行遠端操作。

按鈕	功能
Display	-顯示畫面控制。
Play	-播放。
Reverse	-快速倒轉。如果 DVD 在暫停狀態，則進行慢慢倒轉。可輪換不同的播放速度。
Forward	-往前快轉。如果 DVD 在暫停狀態，則會慢慢前進。可輪換不同的播放速度。

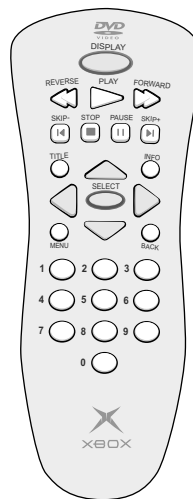

- Skip - -移到目前這一章的開頭。如果是在某一章開頭的一兩秒按下此鈕，便會跳到上一章的開頭。如果 DVD 在暫停狀態，則會跳到上一格。
- Stop - -停止播放。
- Pause - -暫停播放。
- Skip + - -移到下一章。如果 DVD 在暫停狀態，則會跳到下一格。
- Title - -跳到標題功能表。
- Info - -在畫面上顯示標題、章節和時間長短。
- Select - -接受目前的選取項目。如果輸入特定的章節編號，便會跳到該章節。
- Arrows - -進行向上、向下、向左或向右選取。
- Menu - -跳到主功能表。
- Back - -跳到上一個功能表。如果是在主功能表中，便會恢復播放。
- Numbers - -輸入特定的章節編號，然後按下 [Select]。

其他功能則可以從畫面顯示找到。

圖示	操作
	可輪換不同的字幕語言。
	可輪換不同的視角。
	可輪換不同的音軌 (包括多語音軌)。
	從設定功能表選取視訊、音效和語言選項。
	循環播放。先按下按鈕，選取 A 點。然後按第二下，以選取 B 點，接著會在 A 點和 B 點之間循環播放。按第三下時，便會關閉循環播放。
	放大圖片。在放大比例之間切換。放大後，利用方向鍵移動瀏覽圖片。

通用遙控器

若要設定通用遙控器，以便使用 Xbox DVD 影片播放套件，請依照您通用遙控器的說明，輸入支援 RCA DVD 播放程式的裝置代碼。

家長控制

您可以根據影片分級，限制要在 Xbox 視訊遊戲系統上播放之 DVD 內容。若要決定 DVD 影片的等級，請參閱 DVD 影片的說明文件。依據預設值，Xbox 視訊遊戲系統設定為可以播放所有內容。

若要變更可播放影片的等級

1. 開啟 Xbox 主機 (光碟托盤中不可有任何光碟)。
2. 選取 [設定]，然後選取 [家長控制]。
3. 選取影片，接著選取您要的等級。

Xbox 遊戲系統會播放設定等級或該等級以下的 DVD 影片。如果您選擇的是 [所有內容] 以外的等級，則必須輸入密碼。

如果您遺失或忘記密碼，或者有任何關於本產品的問題，請撥打列於〈疑難排解〉一節中的「Xbox 客戶支援」專線。

疑難排解**如果無法使用 DVD 功能**

有些 DVD 可能無法支援 Xbox DVD 影片播放套件的所有功能，例如字幕、多語音軌、多重視角和慢動作播放。如需更多關於支援功能的資訊，請參閱 DVD 製造廠商提供的說明文件。

在極少數的情況下，某些 DVD 可能無法正常操作。這主要是因為 DVD 視訊軟體的製造程序或軟體編碼的不同。

如果沒有影像或聲音，或是影像或聲音的品質不佳

將 AV 纜線或 AV 配件組連接好。如需關於安裝、聲音和視訊疑難排解的資訊，請參閱

《Xbox 視訊遊戲系統說明手冊》或 AV 配件組的說明。

如需協助

若遇到任何問題，請勿試圖將 Xbox DVD 影片播放套件或 Xbox 主機以任何方式進行拆解、維修或者修改。以免因觸電或起火而導致嚴重的傷害或死亡，並喪失產品原本提供的保固。請參閱 <http://www.xbox.com> 或者撥打「Xbox 客戶支援」專線：

台灣：00801 44 4231

香港：800 96 4215

新加坡：800 448 1330

本文件中的資訊 (包括 URL 及其他 Internet 網站參照)，如有變更恕不另行通知。除非另有註明，否則本文之範例公司、組織、產品、領域名稱、電子郵件位址、商標圖樣、人員、地點及事件均為虛構，並非意指任何真實公司、組織、產品、領域、電子郵件地址、商標圖樣、人員、地點或事件。遵守所有適用的著作權法是使用者的責任。未經 Microsoft Corporation 書面許可，貴用戶不得為任何目的使用任何形式或方法 (電子形式、機械形式、影印、記錄或其他方式) 複製或傳送本文件的任何部份，也不得將本文件的任何部份重製、儲存或放入檢索系統 (retrieval system)。

Microsoft 可能擁有本文件所提及內容中所含之專利權、專利優先權、商標、著作權，或其他智慧財產權。除非 Microsoft 書面授權合約所明示規定者外，提供本文件並不授予貴用戶上述專利權、商標、著作權或其他智慧財產權。

© 2002 Microsoft Corporation. 保留一切權利。

Microsoft、Xbox 和 Xbox 商標圖樣係 Microsoft Corporation 在美國及/或其他國家的註冊商標或商標。

由 Dolby Laboratories 授權製造。Dolby 和 雙 D 符號都是 Dolby Laboratories 的商標。尚未發行的機密著作物。Copyright 1992-1997 Dolby Laboratories. 保留一切權利。

本文件中所提實際公司和產品，可能為各擁有人所有之商標。

Microsoft Corporation, One Microsoft Way, Redmond, WA 98052-6399 USA.



0902 Part Number: X08-85966-01